


ROUND RAIL INSTALLATION INSTRUCTIONS

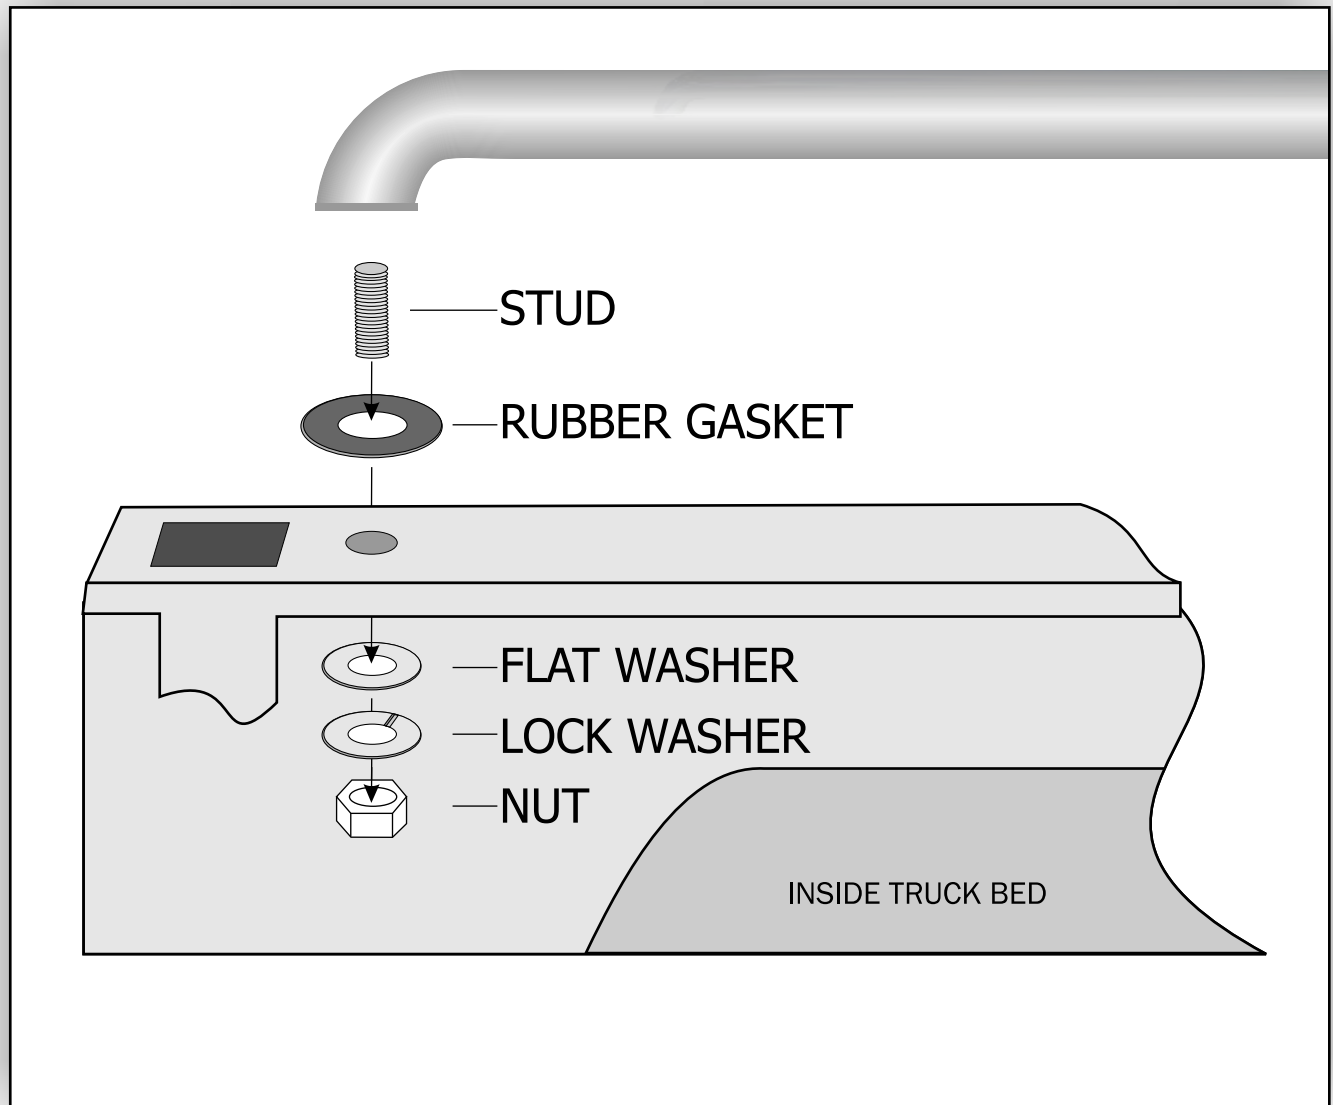

1. Screw stud into brackets on each end of rail. Pointed ends should point down. (Hand tight only)
2. Place rail on pickup in desired position. Rest pointed studs lightly on top of pickup bed. Tap lightly with heel of hand to mark desired drilling places.
3. After mark is made, counter punch with small centerpunch to insure drill bit does not slip.
4. Drill 3/8" holes in punch marks.
5. Place gaskets in position.
6. Position rails with pointed ends through holes.
7. Place in order on underside of bed: one flat washer, one lock washer, one nut. Tighten moderately; do not use power tools.

NOTE: FOR LASTING BEAUTY AND PROTECTION, USE CHROME POLISH REGULARLY.